

# Modbus connection

# C5


C5 controller supports Modbus RTU and Modbus TCP/IP protocols

**Modbus RTU** protocol works via RS485 interface, connection is provided to terminals 1,2,3 of the C5 controller (Pic. 1). Default interface settings and ID are as follows:


Baudrate	19200
Word length	8
Parity	EVEN
Stop bits	1
Modbus ID	1

These settings can be changed using laptop connected to webserver (Pic. 2). To connect devices use twisted pair cable. Maximum cable length is 150m. Connect GND cables together, if distance between the RS485 interfaces is more than 10m.


**Modbus TCP** protocol uses Ethernet interface, connection is provided to RJ-45 socket (Pic.1) on the C5 controller (CAT5 cable is recommended). The maximum cable length between device and C5 controller board must not exceed 100m. Default IP address is 192.168.0.50, port 502. The IP address can be changed using laptop connected to webserver (Pic. 2) or control panel (Pic. 3).

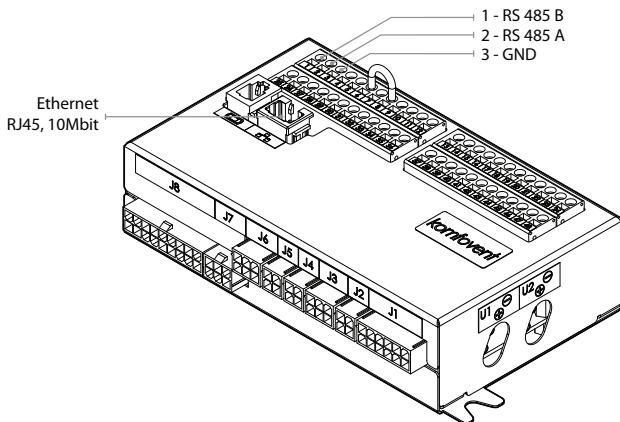

Picture 1. C5 controller board

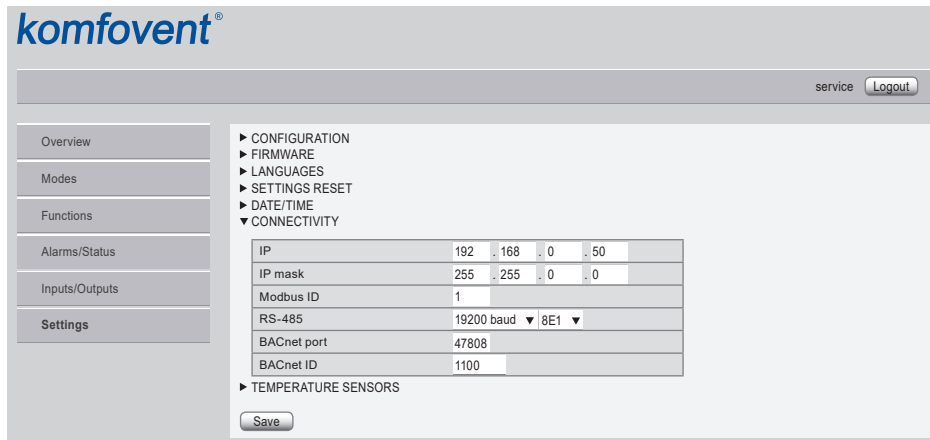

Picture 2. Connectivity settings

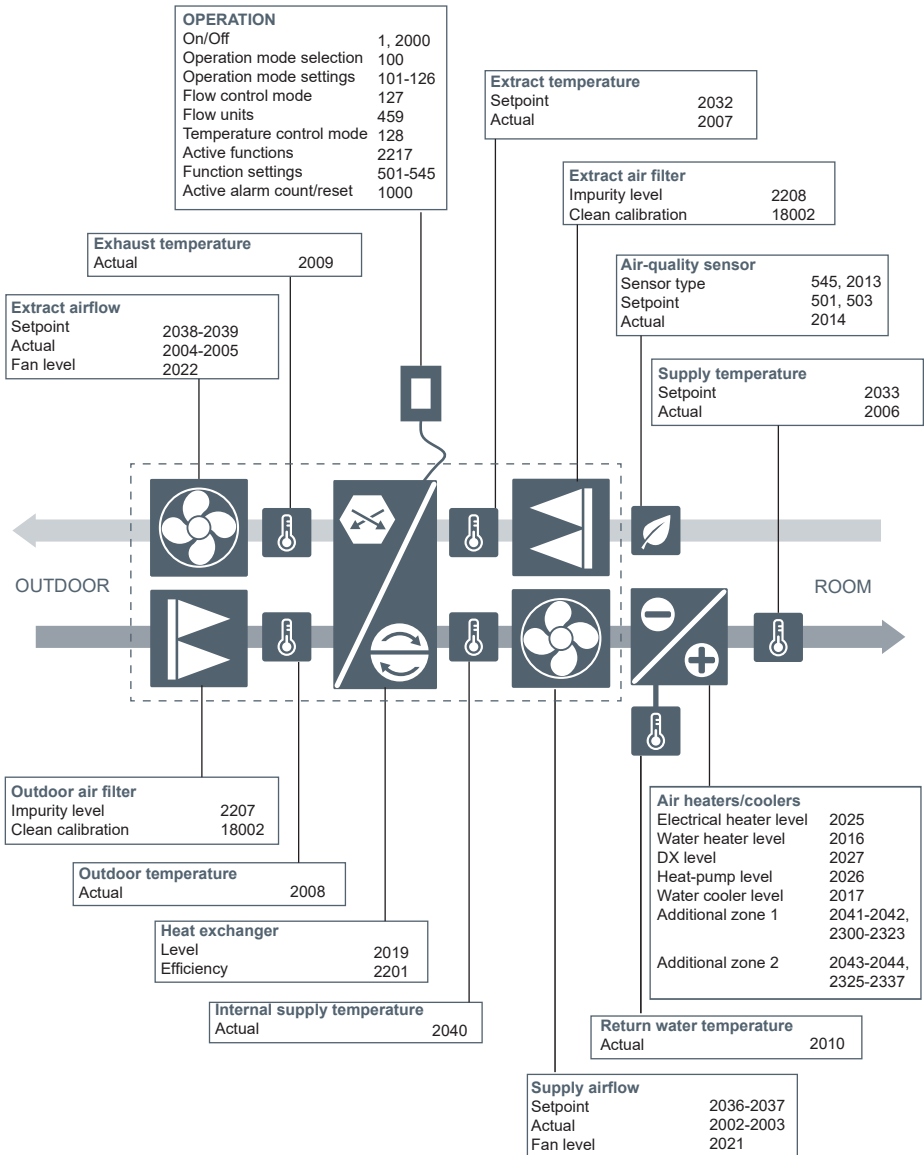

Following tables lists available Modbus registers

MODES						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
1	int	R/W	0-1	0	AHU On/Off control	0-Off, 1-On
100	int	R/W	1-6	1	Operation mode selection	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
101-102	int32	R/W	-	-	Comfort1: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
103-104	int32	R/W	-	-	Comfort1: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
105	int	R/W	50-400	210	Comfort1: Setpoint temperature	200 => 20,0C
106-107	int32	R/W	-	-	Comfort2: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
108-109	int32	R/W	-	-	Comfort2: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
110	int	R/W	50-400	210	Comfort2: Setpoint temperature	200 => 20,0C
111-112	int32	R/W	-	-	Economy1: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
113-114	int32	R/W	-	-	Economy1: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
115	int	R/W	50-400	200	Economy1: Setpoint temperature	200 => 20,0C
116-117	int32	R/W	-	-	Economy2: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
118-119	int32	R/W	-	-	Economy2: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
120	int	R/W	50-400	190	Economy2: Setpoint temperature	200 => 20,0C
121-122	int32	R/W	-	-	Special: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
123-124	int32	R/W	-	-	Special: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
125	int	R/W	50-400	210	Special: Setpoint temperature	200 => 20,0C
126	bin	R/W	-	31	Special: Configuration	b4-Dehumidifying, b3-Humidifying, b2-Recirculation, b1-Cooling, b0-Heating (1-Enable, 0-Disable)
127	int	R/W	0-1	0	Flow control mode	0-CAV, 1-VAV, 2 - DCV
128	int	R/W	0-2	0	Temp. control mode	0-Supply, 1-Extract, 2-Room
129	int	R/W	0-4	0	VAV status/calibration	0-Not calibrated, 1-Calibrating, 2-Supply, 3-Extract, 4-Double. Write 0x99C5 to start VAV calibration
130	int	R/W	100-5000	500	VAV sensors range	500 => 500Pa
131	int	R/W	0-4500	0	Nominal supply pressure	Auto-correction to be within allowed range (0-90% of VAV sensors range)
132	int	R/W	0-4500	0	Nominal exhaust pressure	Auto-correction to be within allowed range (0-90% of VAV sensors range)

OPERATION PROGRAM						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
200	bin	R/W	-	0	Event01: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
201	int8x2	R/W	0:00-23:59	0:00	Event01: Start time	0x0805 => 8:05
202	int8x2	R/W	0:00-24:00	0:00	Event01: Stop time	0x0805 => 8:05
203	int	R/W	0-5	0	Event01: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
204	bin	R/W	-	0	Event02: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
205	int8x2	R/W	0:00-23:59	0:00	Event02: Start time	0x0805 => 8:05
206	int8x2	R/W	0:00-24:00	0:00	Event02: Stop time	0x0805 => 8:05
207	int	R/W	0-5	0	Event02: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
208	bin	R/W	-	0	Event03: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
209	int8x2	R/W	0:00-23:59	0:00	Event03: Start time	0x0805 => 8:05
210	int8x2	R/W	0:00-24:00	0:00	Event03: Stop time	0x0805 => 8:05
211	int	R/W	0-5	0	Event03: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
212	bin	R/W	-	0	Event04: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
213	int8x2	R/W	0:00-23:59	0:00	Event04: Start time	0x0805 => 8:05
214	int8x2	R/W	0:00-24:00	0:00	Event04: Stop time	0x0805 => 8:05
215	int	R/W	0-5	0	Event04: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
216	bin	R/W	-	0	Event05: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
217	int8x2	R/W	0:00-23:59	0:00	Event05: Start time	0x0805 => 8:05
218	int8x2	R/W	0:00-24:00	0:00	Event05: Stop time	0x0805 => 8:05
219	int	R/W	0-5	0	Event05: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
220	bin	R/W	-	0	Event06: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
221	int8x2	R/W	0:00-23:59	0:00	Event06: Start time	0x0805 => 8:05
222	int8x2	R/W	0:00-24:00	0:00	Event06: Stop time	0x0805 => 8:05
223	int	R/W	0-5	0	Event06: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
224	bin	R/W	-	0	Event07: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
225	int8x2	R/W	0:00-23:59	0:00	Event07: Start time	0x0805 => 8:05
226	int8x2	R/W	0:00-24:00	0:00	Event07: Stop time	0x0805 => 8:05

OPERATION PROGRAM						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
227	int	R/W	0-5	0	Event07: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy 1, 4-Economy2, 5-Special
228	bin	R/W	-	0	Event08: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
229	int8x2	R/W	0:00-23:59	0:00	Event08: Start time	0x0805 => 8:05
230	int8x2	R/W	0:00-24:00	0:00	Event08: Stop time	0x0805 => 8:05
231	int	R/W	0-5	0	Event08: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy 1, 4-Economy2, 5-Special
232	bin	R/W	-	0	Event09: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
233	int8x2	R/W	0:00-23:59	0:00	Event09: Start time	0x0805 => 8:05
234	int8x2	R/W	0:00-24:00	0:00	Event09: Stop time	0x0805 => 8:05
235	int	R/W	0-5	0	Event09: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy 1, 4-Economy2, 5-Special
236	bin	R/W	-	0	Event10: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
237	int8x2	R/W	0:00-23:59	0:00	Event10: Start time	0x0805 => 8:05
238	int8x2	R/W	0:00-24:00	0:00	Event10: Stop time	0x0805 => 8:05
239	int	R/W	0-5	0	Event10: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy 1, 4-Economy2, 5-Special
240	bin	R/W	-	0	Event11: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
241	int8x2	R/W	0:00-23:59	0:00	Event11: Start time	0x0805 => 8:05
242	int8x2	R/W	0:00-24:00	0:00	Event11: Stop time	0x0805 => 8:05
243	int	R/W	0-5	0	Event11: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy 1, 4-Economy2, 5-Special
244	bin	R/W	-	0	Event12: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
245	int8x2	R/W	0:00-23:59	0:00	Event12: Start time	0x0805 => 8:05
246	int8x2	R/W	0:00-24:00	0:00	Event12: Stop time	0x0805 => 8:05
247	int	R/W	0-5	0	Event12: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy 1, 4-Economy2, 5-Special
248	bin	R/W	-	0	Event13: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
249	int8x2	R/W	0:00-23:59	0:00	Event13: Start time	0x0805 => 8:05
250	int8x2	R/W	0:00-24:00	0:00	Event13: Stop time	0x0805 => 8:05
251	int	R/W	0-5	0	Event13: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy 1, 4-Economy2, 5-Special
252	bin	R/W	-	0	Event14: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
253	int8x2	R/W	0:00-23:59	0:00	Event14: Start time	0x0805 => 8:05

OPERATION PROGRAM						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
254	int8x2	R/W	0:00-24:00	0:00	Event14: Stop time	0x0805 => 8:05
255	int	R/W	0-5	0	Event14: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
256	bin	R/W	-	0	Event15: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
257	int8x2	R/W	0:00-23:59	0:00	Event15: Start time	0x0805 => 8:05
258	int8x2	R/W	0:00-24:00	0:00	Event15: Stop time	0x0805 => 8:05
259	int	R/W	0-5	0	Event15: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
260	bin	R/W	-	0	Event16: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
261	int8x2	R/W	0:00-23:59	0:00	Event16: Start time	0x0805 => 8:05
262	int8x2	R/W	0:00-24:00	0:00	Event16: Stop time	0x0805 => 8:05
263	int	R/W	0-5	0	Event16: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
264	bin	R/W	-	0	Event17: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
265	int8x2	R/W	0:00-23:59	0:00	Event17: Start time	0x0805 => 8:05
266	int8x2	R/W	0:00-24:00	0:00	Event17: Stop time	0x0805 => 8:05
267	int	R/W	0-5	0	Event17: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
268	bin	R/W	-	0	Event18: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
269	int8x2	R/W	0:00-23:59	0:00	Event18: Start time	0x0805 => 8:05
270	int8x2	R/W	0:00-24:00	0:00	Event18: Stop time	0x0805 => 8:05
271	int	R/W	0-5	0	Event18: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
272	bin	R/W	-	0	Event19: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
273	int8x2	R/W	0:00-23:59	0:00	Event19: Start time	0x0805 => 8:05
274	int8x2	R/W	0:00-24:00	0:00	Event19: Stop time	0x0805 => 8:05
275	int	R/W	0-5	0	Event19: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
276	bin	R/W	-	0	Event20: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
277	int8x2	R/W	0:00-23:59	0:00	Event20: Start time	0x0805 => 8:05
278	int8x2	R/W	0:00-24:00	0:00	Event20: Stop time	0x0805 => 8:05
279	int	R/W	0-5	0	Event20: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special

HOLLYDAY SCHEDULE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
300	int	R/W	2010-2250		Event01: Start year	
301	int8x2	R/W	01.01-12.31		Event01: Start date	0x020C => Feb12
302	int	R/W	2010-2250		Event01: Stop year	
303	int8x2	R/W	01.01-12.31		Event01: Stop date	0x020C => Feb12
304	int	R/W	0-6		Event01: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
305	int	R/W	2010-2250		Event02: Start year	
306	int8x2	R/W	01.01-12.31		Event02: Start date	0x020C => Feb12
307	int	R/W	2010-2250		Event02: Stop year	
308	int8x2	R/W	01.01-12.31		Event02: Stop date	0x020C => Feb12
309	int	R/W	0-6		Event02: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
310	int	R/W	2010-2250		Event03: Start year	
311	int8x2	R/W	01.01-12.31		Event03: Start date	0x020C => Feb12
312	int	R/W	2010-2250		Event03: Stop year	
313	int8x2	R/W	01.01-12.31		Event03: Stop date	0x020C => Feb12
314	int	R/W	0-6		Event03: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
315	int	R/W	2010-2250		Event04: Start year	
316	int8x2	R/W	01.01-12.31		Event04: Start date	0x020C => Feb12
317	int	R/W	2010-2250		Event04: Stop year	
318	int8x2	R/W	01.01-12.31		Event04: Stop date	0x020C => Feb12
319	int	R/W	0-6		Event04: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
320	int	R/W	2010-2250		Event05: Start year	
321	int8x2	R/W	01.01-12.31		Event05: Start date	0x020C => Feb12
322	int	R/W	2010-2250		Event05: Stop year	
323	int8x2	R/W	01.01-12.31		Event05: Stop date	0x020C => Feb12
324	int	R/W	0-6		Event05: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
325	int	R/W	2010-2250		Event06: Start year	
326	int8x2	R/W	01.01-12.31		Event06: Start date	0x020C => Feb12



HOLLYDAY SCHEDULE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
327	int	R/W	2010-2250		Event06: Stop year	
328	int8x2	R/W	01.01-12.31		Event06: Stop date	0x020C => Feb12
329	int	R/W	0-6		Event06: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
330	int	R/W	2010-2250		Event07: Start year	
331	int8x2	R/W	01.01-12.31		Event07: Start date	0x020C => Feb12
332	int	R/W	2010-2250		Event07: Stop year	
333	int8x2	R/W	01.01-12.31		Event07: Stop date	0x020C => Feb12
334	int	R/W	0-6		Event07: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
335	int	R/W	2010-2250		Event08: Start year	
336	int8x2	R/W	01.01-12.31		Event08: Start date	0x020C => Feb12
337	int	R/W	2010-2250		Event08: Stop year	
338	int8x2	R/W	01.01-12.31		Event08: Stop date	0x020C => Feb12
339	int	R/W	0-6		Event08: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
340	int	R/W	2010-2250		Event09: Start year	
341	int8x2	R/W	01.01-12.31		Event09: Start date	0x020C => Feb12
342	int	R/W	2010-2250		Event09: Stop year	
343	int8x2	R/W	01.01-12.31		Event09: Stop date	0x020C => Feb12
344	int	R/W	0-6		Event09: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
345	int	R/W	2010-2250		Event10: Start year	
346	int8x2	R/W	01.01-12.31		Event10: Start date	0x020C => Feb12
347	int	R/W	2010-2250		Event10: Stop year	
348	int8x2	R/W	01.01-12.31		Event10: Stop date	0x020C => Feb12
349	int	R/W	0-6		Event10: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program

RECIRCULATION SCHEDULE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
400	bin	R/W	-	0	Event01: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
401	int8x2	R/W	0:00-23:59	0:00	Event01: Start time	0x0805 => 8:05

RECIRCULATION SCHEDULE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
402	int8x2	R/W	0:00-24:00	0:00	Event01: Stop time	0x0805 => 8:05
403	int	R/W	0..100	0	Event01: Level	
404	bin	R/W	-	0	Event02: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
405	int8x2	R/W	0:00-23:59	0:00	Event02: Start time	0x0805 => 8:05
406	int8x2	R/W	0:00-24:00	0:00	Event02: Stop time	0x0805 => 8:05
407	int	R/W	0..100	0	Event02: Level	
408	bin	R/W	-	0	Event03: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
409	int8x2	R/W	0:00-23:59	0:00	Event03: Start time	0x0805 => 8:05
410	int8x2	R/W	0:00-24:00	0:00	Event03: Stop time	0x0805 => 8:05
411	int	R/W	0..100	0	Event03: Level	
412	bin	R/W	-	0	Event04: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
413	int8x2	R/W	0:00-23:59	0:00	Event04: Start time	0x0805 => 8:05
414	int8x2	R/W	0:00-24:00	0:00	Event04: Stop time	0x0805 => 8:05
415	int	R/W	0..100	0	Event04: Level	
416	bin	R/W	-	0	Event05: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
417	int8x2	R/W	0:00-23:59	0:00	Event05: Start time	0x0805 => 8:05
418	int8x2	R/W	0:00-24:00	0:00	Event05: Stop time	0x0805 => 8:05
419	int	R/W	0..100	0	Event05: Level	

SETTINGS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
450	int8x2	R/W	0:00-23:59	0:00	Time	0x0805 => 8:05
451	int	R/W	0-59	0	Seconds	
452	int	R	1-7	7	Day of week	1-Mon, 2-Tue, 3-Wed, 4-Thu, 5-Fri, 6-Sat, 7-Sun
453	int8x2	R/W	01.01-12.31	01.01	Date	0x020C => Feb12
454	int	R/W	2010-2250	2012	Year	
455	int	R/W	0-3	0	Language	0-English, 1-Lithuanian, 2-Russian, 3-Polish
456	int	R/W	1-247	1	Modbus address	

SETTINGS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
457-458	int32	R/W		192.168.0.50	IP address	
459	int	R/W	0-3	0	Flow units	0-m3/h, 1-l/s, 2-m3/s, 3-Pa
460-467	int8x2	R	-		AHU S/N	
468-479	int8x2	R			AHU name	
480-481	int8x2	R/W			IP mask	With auto correction
482	int	R/W	-	19200 8E1	RS-485	Speed (b4..b3): 0 – 9600, 1 – 19200, 2 – 38400, 3 – 57600; parity (b1): 0 – none, 1 – even; stop bits (b0): 0 – 1, 1 – 2
483	char	R/W	0..1	0	Daylight saving time	0-Disable, 1-Enable
485	short	R/W	0.65535	47809	BACnet port	
486-487	int32	R/W	0..4194303	20087	BACnet ID	

FUNCTIONS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
500	int	R/W	0..1	0	Air quality control: Enable	0-Disable, 1-Enable
501	int	R/W	200..1800	1000	Air quality control: Setpoint 1	200..1800ppm, 10..90%, 10..90%RH, 5..45C
502	int	R/W	1..5	1	Air quality control: Mode 1	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
503	int	R/W	200..1800	1000	Air quality control: Setpoint 2	200..1800ppm, 10..90%, 10..90%RH, 5..45C
504	int	R/W	1..5	1	Air quality control: Mode 1	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
505	int	R/W	0..1	0	Outdoor comp. ventilation: Enable/Disable	0-Disable, 1-Enable
506	int	R/W	-400..500	-400	Outdoor comp. ventilation: Winter comp. stop	-150 => -15.0C
507	int	R/W	-400..500	0	Outdoor comp. ventilation: Winter comp. start	-150 => -15.0C
508	int	R/W	-400..500	200	Outdoor comp. ventilation: Summer comp. start	250 => 25.0C
509	int	R/W	-400..500	500	Outdoor comp. ventilation: Summer comp. stop	250 => 25.0C
510	int	R/W	0..1	0	Min. temperature control: Enable/Disable	0-Disable, 1-Enable
511	int	R/W	-400..500	150	Min. temperature control: Setpoint	-150 => -15.0C
512	int	R/W	0..1	1	Override function: Enable/Disable	0-Disable, 1-Enable
513	int	R/W	0..2	0	Override function: Override type	0-All time, 1-If on, 2-If off
514	int	R/W	0..6	2	Override function: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program

FUNCTIONS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
515	int	R/W	0..1	0	Summer night cooling: Enable/Disable	0-Disable, 1-Enable
516	int	R/W	100..500	250	Summer night cooling: Start temperature	250 => 25.0C
517	int	R/W	0..1	0	Operation on demand: Enable/Disable	0-Disable, 1-Enable
518	int	R/W	200..1800	150	Operation on demand: Setpoint	200..1800ppm, 10..90%, 10..90%RH, 5..45C
519	int	R/W	0..1	0	Recirculation control: Enable/Disable	0-Disable, 1-Enable
520	int	R/W	200..1800	600	Recirculation control: Setpoint	200..1800ppm, 10..90%, 10..90%RH, 5..45C
521	int	R/W	0..80	30	Recirculation control: Min. fresh air	
522	int	R/W	-400..500	-400	Recirculation control: Winter recirculation end	-150 => -15.0C
523	int	R/W	-400..500	0	Recirculation control: Winter recirculation start	-150 => -15.0C
524	int	R/W	-400..500	200	Recirculation control: Summer recirculation start	250 => 25.0C
525	int	R/W	-400..500	500	Recirculation control: Summer recirculation end	250 => 25.0C
526	int	R/W	0..100	0	Recirculation control: Default recirculation	
527	int	R/W	0..100	60	Recirculation control: Activated recirculation	
528	int	R/W	0..1	0	Humidity control: Enable/Disable	0-Disable, 1-Enable
529	int	R/W	10..90	1000	Humidity control: Setpoint 1	10..90%RH
530	int	R/W	1..5	1	Humidity control: Mode 1	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
531	int	R/W	10..90	1000	Humidity control: Setpoint 2	10..90%RH
532	int	R/W	1..5	2	Humidity control: Mode 2	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
533	int	R/W	1..5	1	Recirculation control: Mode 1	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
534	int	R/W	200..1800	900	Recirculation control: Setpoint 2	200..1800ppm, 10..90%, 10..90%RH, 5..45C
535	int	R/W	1..5	2	Recirculation control: Mode 2	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
536	int	R/W	0..100	20	Recirculation control: Min. fresh air 2	
537	int	R/W	150..500	200	Summer night cooling: Stop temperature	200 => 20.0C
538	bin	R/W	0..1	0	Inspection lighting: Enable/Disable	
539	bin	R/W	0..1	0	Additional zone 1: Enable/Disable	
540	int	R/W	-400..400	210	Additional zone 1: Setpoint	200 => 20.0C

FUNCTIONS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
541	bin	R/W	0..1	0	Additional zone 2: Enable/Disable	
542	int	R/W	-400..400	210	Additional zone 2: Setpoint	200 => 20,0C
543	int	R/W	-500..1200	-32768	External room temperature sensor	200 => 20.0C. Overrides extract flow temperature sensor for temperature control only when written value is in range
544	int	R/W	-1..2	0	Digital input IN4 override	Overrides digital input IN4 for combined heating & cooling coil control. (-1 – function not available or disabled, 0 – heating (winter mode), 1 – cooling (summer mode), 2 – error)
545	int	R/W	0..4	0	Air quality sensor type	0 – CO2, 1 – VOCq, 2 – VOCp, 3 – RH, 4 – temperature

ALARMS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
1000	int	R/W	0..10	-	Active alarms count	Writing 0x99C5 - Active alarms reset and restore previous mode
1001	hex	R		-	Active alarm 1 code (newest)	
1002	hex	R		-	Active alarm 2 code	
1003	hex	R		-	Active alarm 3 code	
1004	hex	R		-	Active alarm 4 code	
1005	hex	R		-	Active alarm 5 code	
1006	hex	R		-	Active alarm 6 code	
1007	hex	R		-	Active alarm 7 code	
1008	hex	R		-	Active alarm 8 code	
1009	hex	R		-	Active alarm 9 code	
1010	hex	R		-	Active alarm 10 code	
1100	int	R	0..50	-	Alarm history count	
1101	int	R	2010..2250	-	Alarm1(newest) year	
1102	int8x2	R	01.01-12.31	-	Alarm1(newest) month-day	0x020C => Feb12
1103	int8x2	R	0:00-23:59	-	Alarm1(newest) time	0x0805 => 8:05
1104	int	R	0..59	-	Alarm1(newest) seconds	
1105	hex	R		-	Alarm1(newest) code	4B => 0x0104
.....	.....	.....	.....	.....	.....	.....
1346	int	R	2010..2250	-	Alarm50 year	
1347	int8x2	R	01.01-12.31	-	Alarm50 month-day	0x020C => Feb12

ALARMS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
1348	int8x2	R	0:00-23:59	-	Alarm50 time	0x0805 => 8:05
1349	int	R	0..59	-	Alarm50 seconds	
1350	hex	R		-	Alarm50 code	4B => 0x0104

MONITORING DATA						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2000	int	R	0-2	-	C5 Start/Stop current status	0-Stop, 1-Enabled but fans are stopped, 2-Running
2001	int	R	0-5	-	Current mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
2002-2003	int	R	-	-	Current supply flow	3500 => 3500 m3/h, 3.500 m3/s, 3500 l/s
2004-2005	int	R	-	-	Current exhaust flow	3500 => 3500 m3/h, 3.500 m3/s, 3500 l/s
2006	int	R	-500..1200	-	Current supply temp., C	250 => 25.0C
2007	int	R	-500..1200	-	Current extract temp., C	250 => 25.0C
2008	int	R	-500..1200	-	Current outdoor temp., C	250 => 25.0C
2009	int	R	-500..1200	-	Current exhaust temp., C	250 => 25.0C
2010	int	R	-500..1200	-	Current return water temp., C	250 => 25.0C
2011	int	R	0..1000	-	Supply air pressure	
2012	int	R	0..1000	-	Extract air pressure	
2013	int	R	0..4	-	Air quality sensor type	0-CO2, 1-VOCq, 2-VOCp, 3-RH, 4-TMP
2014	int	R	0..2000	-	Current air quality level	CO2: 0..2000ppm, VOC: 0..1000(0..100%), RH: 0..1000(0..100%), TMP: 0..500(0..50C)
2015	int	R	0..1000	-	Current supply air humidity	157 => 15.7%
2016	int	R	0..1000	-	Water heater level	
2017	int	R	0..1000	-	Water cooler level	
2018	int	R	0..1000	-	Humidity control level	
2019	int	R	0..1000	-	Heat exchanger level	
2020	int	R	0..1000	-	Recirculation level	
2021	int	R	0..1000	-	Supply fan level	
2022	int	R	0..1000	-	Exhaust fan level	
2023	int	R	0..1000	-	Outdoor air damper actuator level	

MONITORING DATA						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2024	int	R	0..1000	-	Exhaust air damper actuator level	
2025	int	R	0..1000	-	Electric heater level	
2026	int	R	-1000..1000	-	Heat pump level	
2027	int	R	-1000..1000	-	DX level	
2028	bin	R	0..1	-	OVR input	
2029	bin	R	0..1	-	Fire system input	
2030	bin	R	0..1	-	External stop input	
2031	bin	R	0..1	-	Control input	
2032	int	R	50..400	-	Current temp. setpoint, C	250 => 25.0C
2033	int	R	50..400	-	Current supply air temp. setpoint, C	250 => 25.0C
2034	bin	R	0..1	-	Water heater pump	
2035	bin	R	0..1	-	Water cooler pump	
2036-2037	int	R	-	-	Current supply flow setpoint	3500 => 3500 m3/h, 3.500 m3/s, 3500 l/s
2038-2039	int	R	-	-	Current extract flow setpoint	3500 => 3500 m3/h, 3.500 m3/s, 3500 l/s
2040	int	R	-500..1200	-	Current internal supply temp., C	250 => 25.0C
2041	int	R	-500..1200	-	Additional zone 1: current supply temp., C	250 => 25.0C
2042	int	R	-500..1200	-	Additional zone 1: current return water temp., C	250 => 25.0C
2043	int	R	-500..1200	-	Additional zone 2: current supply temp., C	250 => 25.0C
2044	int	R	-500..1200	-	Additional zone 2: current return water temp., C	250 => 25.0C
2200	bin	R		-	Counters/efficiencies configuration	b8-Exhaust fan units(0-h, 1-kWh), b7-Supply fan units(0-h, 1-kWh), b6-Exhaust fan counter, b5-Heater counter, b4-Extract filter, b3-Outdoor filter, b2-Exhaust SFP, b1-Supply SFP, b0-HX efficiency (0-Unavailable, 1-Available)
2201	int	R	0..100, 255	-	Heat exchanger thermal efficiency, %	255 - Unavailable
2202	int	R	0..100, 255	-	Energy saving, %	255 - Unavailable
2203-2204	int	R		-	Heat exchanger recovery, W	2500 => 2.5kW (0xFFFFFFFF - Unavailable)
2205	int	R		-	Supply SFP	125 => 1.25
2206	int	R		-	Exhaust SFP	125 => 1.25
2207	int	R	0..100	-	Outdoor air filter impurity level, %	

MONITORING DATA						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2208	int	R	0..100	-	Exhaust air filter impurity level, %	
2209-2210	int	R	0..1'000'000	-	Air heater operation, hours	
2211-2212	int	R	0..50'000'000	-	Supply fan operation, hours or kWh	
2213-2214	int	R	0..50'000'000	-	Exhaust fan operation, hours or kWh	
2215	int	R	0..65535	-	Current supply fan power, W	
2216	int	R	0..65535	-	Current exhaust fan power, W	
2217	bin	R		-	Active functions	b5-OOD,b4-AQC,b3-SNC,b2-MTC,b1-OVR,b0-OCV
2218-2219	int	R	0..1'000'000	-	Air cooler operation, hours	
2220-2221	int	R	0..4'000'000	-	Heat exchanger operation, kWh	
2222-2223	int	R	0..4'000'000	-	Air heater operation, kWh	

MONITORING DATA ZONE 1						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2300	int	R	0..1000	-	Electric heater: level	
2301	int	R	0..1000	-	Electric heater: cooler level	
2302	int	R	-500..1200	-	Electric heater: air temperature	
2303	int	R	0..1000	-	Electric heater: air quality	
2304	int	R	0..1200	-	Electric heater: heater temperature	0..1200 when NTC sensor is selected, 0-1000 when TK70 sensor is selected
2305	bin	R	-	-	Electric heater: stages active	b3 – stage4, b2 – stage3, b1 – stage2, b0 – stage1
2306	bin	R	-	-	Electric heater: inputs	b2 – TK70, b1 – TK60, b0 – TK100
2307	bin	R	-	-	Electric heater: alarms	b2 – TK60 alarm, b1 – TK70 alarm, b0 – TK100 alarm
2310	int	R	0..1000	-	Water: heater level	
2311	int	R	0..1000	-	Water: cooler level	
2312	int	R	-500..1200	-	Water: air temperature	
2313	int	R	0..1000	-	Water: air quality	
2314	int	R	-300..1200	-	Water: return water temperature	
2315	bin	R	-	-	Water: outputs	b1 – cooling pump, b0 – heating pump
2316	bin	R	-	-	Water: inputs	b1 – combined coil is: 1-cooling, 0-heating, b0 – low water temperature,



MONITORING DATA ZONE 1						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2317	bin	R	-	-	Water: alarms	b0 – Low water temperature
2320	int	R	-1000..1000	-	DX level unit: level	> 0 – heating, < 0 – cooling, -32768 – forced stop
2321	int	R	0..1000	-	DX level unit: cooler level	
2322	int	R	-500..1200	-	DX level unit: air temperature	
2323	int	R	0..1000	-	DX level unit: air quality	
2325	bin	R	-	-	DX level unit: operating & stages active	b4 – reverse: 1-heating, 0-cooling, b3 – stage4, b2 – stage3, b1 – stage2, b0 – stage1
2326	bin	R	-	-	DX level unit: inputs	b0 – external error
2327	bin	R	-	-	DX level unit: alarms	b0 – external error alarm
2330	int	R	-1000..1000	-	DX modulated unit: level/setpoint/error	Level or temperature setpoint (t → 0..10V) or temperature error signal (0..5..10V), depending on configuration
2331	int	R	0..1000	-	DX modulated unit: cooler level	
2332	int	R	-500..1200	-	DX modulated unit: air temperature	
2333	int	R	0..1000	-	DX modulated unit: air quality	
2335	bin	R	-	-	DX modulated unit: control outputs	b2 – heating, b1 – cooling, b0 – operation
2336	bin	R	-	-	DX modulated unit: inputs	b0 – external error
2337	bin	R	-	-	DX modulated unit: alarms	b0 – external error alarm

MONITORING DATA ZONE 2						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2400	int	R	0..1000	-	Electric heater: level	
2401	int	R	0..1000	-	Electric heater: cooler level	
2402	int	R	-500..1200	-	Electric heater: air temperature	
2403	int	R	0..1000	-	Electric heater: air quality	
2404	int	R	0..1200	-	Electric heater: heater temperature	0..1200 when NTC sensor is selected, 0-1000 when TK70 sensor is selected
2405	bin	R	-	-	Electric heater: stages active	b3 – stage4, b2 – stage3, b1 – stage2, b0 – stage1
2406	bin	R	-	-	Electric heater: inputs	b2 – TK70, b1 – TK60, b0 – TK100
2407	bin	R	-	-	Electric heater: alarms	b2 – TK60 alarm, b1 – TK70 alarm, b0 – TK100 alarm
2410	int	R	0..1000	-	Water: heater level	
2411	int	R	0..1000	-	Water: cooler level	

MONITORING DATA ZONE 2						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2412	int	R	-500..1200	-	Water: air temperature	
2413	int	R	0..1000	-	Water: air quality	
2414	int	R	-300..1200	-	Water: return water temperature	
2415	bin	R	-	-	Water: outputs	b1 – cooling pump, b0 – heating pump
2416	bin	R	-	-	Water: inputs	b1 – combined coil is: 1-cooling, 0-heating, b0 – low water temperature,
2417	bin	R	-	-	Water: alarms	b0 – Low water temperature
2420	int	R	-1000..1000	-	DX level unit: level	> 0 – heating, < 0 – cooling, -32768 – forced stop
2421	int	R	0..1000	-	DX level unit: cooler level	
2422	int	R	-500..1200	-	DX level unit: air temperature	
2423	int	R	0..1000	-	DX level unit: air quality	
2425	bin	R	-	-	DX level unit: operating & stages active	b4 – reverse: 1-heating, 0-cooling, b3 – stage4, b2 – stage3, b1 – stage2, b0 – stage1
2426	bin	R	-	-	DX level unit: inputs	b0 – external error
2427	bin	R	-	-	DX level unit: alarms	b0 – external error alarm
2430	int	R	-1000..1000	-	DX modulated unit: level/setpoint/error	Level or temperature setpoint (t → 0..10V) or temperature error signal (0..5..10V), depending on configuration
2431	int	R	0..1000	-	DX modulated unit: cooler level	
2432	int	R	-500..1200	-	DX modulated unit: air temperature	
2433	int	R	0..1000	-	DX modulated unit: air quality	
2435	bin	R	-	-	DX modulated unit: control outputs	b2 – heating, b1 – cooling, b0 – operation
2436	bin	R	-	-	DX modulated unit: inputs	b0 – external error
2437	bin	R	-	-	DX modulated unit: alarms	b0 – external error alarm

Analog inputs						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2800	int	R	-500..1200	-	Analog input: Supply temperature	250 => 25.0C
2801	int	R	-500..1200	-	Analog input: Extract temperature	250 => 25.0C
2802	int	R	-500..1200	-	Analog input: Outdoor temperature	250 => 25.0C
2803	int	R	-500..1200	-	Analog input: Exhaust temperature	250 => 25.0C
2804	int	R	-500..1200	-	Analog input: Internal supply temperature	250 => 25.0C
2805	int	R	-500..1200	-	Analog input: Water temperature	250 => 25.0C

Analog inputs						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2806	int	R		-	Analog input: Supply air pressure	
2807	int	R		-	Analog input: Extract air pressure	
2808	int	R		-	Analog input: Air Quality	350 => 35%
2809	int	R		-	Analog input: Humidity	157 => 15.7%
2810	int	R		-	Analog input: HP/CF air pressure	
2811	int	R		-	Analog input: Supply fan pressure	
2812	int	R		-	Analog input: Exhaust fan pressure	
2813	int	R		-	Analog input: Out filter pressure	
2814	int	R		-	Analog input: Ext filter pressure	
2815	int	R	-500..1200	-	Analog input: EI heater temperature	250 => 25.0C
2816	int	R	-500..1200	-	Analog input: HP air temperature	250 => 25.0C
2817	int	R	-500..1200	-	Analog input: HP coil temperature	250 => 25.0C
2818	int	R		-	Analog input: HP high pressure	
2819	int	R		-	Analog input: HP low pressure	
2820	int	R		-	Analog input: HP AI1	
2821	int	R	-500..1200	-	Analog input: Zone1 air temperature	250 => 25.0C
2822	int	R	-500..1200	-	Analog input: Zone1 water/heater temperature	250 => 25.0C
2823	int	R	-500..1200	-	Analog input: Zone2 air temperature	250 => 25.0C
2824	int	R	-500..1200	-	Analog input: Zone2 water/heater temperature	250 => 25.0C

Analog outputs						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2825	int	R	0..1000	-	Analog output: Hot water	350 => 35%
2826	int	R	0..1000	-	Analog output: Cold water/Modulating DX	350 => 35%
2827	int	R	0..1000	-	Analog output: Humidity/Modulating DX	350 => 35%
2828	int	R	0..1000	-	Analog output: Recuperation	350 => 35%
2829	int	R	0..1000	-	Analog output: Recirculation	350 => 35%
2830	int	R	0..1000	-	Analog output: Supply fan	350 => 35%

Analog outputs						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2831	int	R	0..1000	-	Analog output: Exhaust fan	350 => 35%
2832	int	R	0..1000	-	Analog output: HP air recirculation	350 => 35%
2833	int	R	0..1000	-	Analog output: Outdoor air damper	350 => 35%
2834	int	R	0..1000	-	Analog output: Exhaust air damper	350 => 35%
2835	int	R	0..1000	-	Analog output: El.heater	350 => 35%
2836	int	R	0..1000	-	Analog output: HP Stage1	350 => 35%
2837	int	R	0..1000	-	Analog output: HP AO2	350 => 35%
2838	int	R	0..1000	-	Analog output: Zone1 level (heater level)	350 => 35%
2839	int	R	0..1000	-	Analog output: Zone1 cooler level	350 => 35%
2840	int	R	-1000..1000	-	Analog output: Zone1 temperature setpoint/ error	250 => 25.0C
2841	int	R	0..1000	-	Analog output: Zone2 level (heater level)	350 => 35%
2842	int	R	0..1000	-	Analog output: Zone2 cooler level	350 => 35%
2843	int	R	-1000..1000	-	Analog output: Zone2 temperature setpoint/ error	250 => 25.0C

Digital inputs						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2844	bin	R	0..1	-	Digital input: OVR	
2845	bin	R	0..1	-	Digital input: Fire system	
2846	bin	R	0..1	-	Digital input: External stop	
2847	bin	R	0..1	-	Digital input: Control	
2848	bin	R	0..1	-	Digital input: El.heat1 120C	
2849	bin	R	0..1	-	Digital input: El.heat1 70C	
2850	bin	R	0..1	-	Digital input: Supply fan overheat	
2851	bin	R	0..1	-	Digital input: Exhaust fan overheat	
2852	bin	R	0..1	-	Digital input: Outdoor filter	
2853	bin	R	0..1	-	Digital input: Extract filter	
2854	bin	R	0..1	-	Digital input: C5 Auxiliary	
2855	bin	R	0..1	-	Digital input: Pump/coil protection	

Digital inputs						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2856	bin	R	0..1	-	Digital input: HP Stage1 fail	
2857	bin	R	0..1	-	Digital input: HP Stage2 fail	
2858	bin	R	0..1	-	Digital input: HP Stage3 fail	
2859	bin	R	0..1	-	Digital input: HP D14	
2860	bin	R	0..1	-	"Digital input: Zone1 TK100/water temperature sensor/external stop"	
2861	bin	R	0..1	-	Digital input: Zone1 TK60/combicoil reverse	
2862	bin	R	0..1	-	Digital input: Zone1 TK70	
2863	bin	R	0..1	-	Digital input: Zone1 TK100 alarm/low water temperature alarm/ external stop alarm	
2864	bin	R	0..1	-	Digital input: Zone1 TK70 alarm	
2865	bin	R	0..1	-	Digital input: Zone1 TK60 alarm	
2866	bin	R	0..1	-	"Digital input: Zone2 TK100/water temperature sensor/external stop"	
2867	bin	R	0..1	-	Digital input: Zone2 TK60/combicoil reverse	
2868	bin	R	0..1	-	Digital input: Zone2 TK70	
2869	bin	R	0..1	-	Digital input: Zone2 TK100 alarm/low water temperature alarm/ external stop alarm	
2870	bin	R	0..1	-	Digital input: Zone2 TK70 alarm	
2871	bin	R	0..1	-	Digital input: Zone2 TK60 alarm	

Digital outputs						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2872	bin	R	0..1	-	Digital output: Water heating	
2873	bin	R	0..1	-	Digital output: Water cooling	
2874	bin	R	0..1	-	Digital output: DX Operation/Step1	
2875	bin	R	0..1	-	Digital output: DX Cooling/Step2	
2876	bin	R	0..1	-	Digital output: DX Heating/Step3/ Changeover	
2877	bin	R	0..1	-	Digital output: Alarm	

Digital outputs						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2878	bin	R	0..1	-	Digital output: Run	
2879	bin	R	0..1	-	Digital output: Air damper	
2880	bin	R	0..1	-	Digital output: El.heat 1	
2881	bin	R	0..1	-	Digital output: El.heat 2	
2882	bin	R	0..1	-	Digital output: Recu- peration	
2883	bin	R	0..1	-	Digital output: HP Stage2	
2884	bin	R	0..1	-	Digital output: HP Stage3	
2885	bin	R	0..1	-	Digital output: HP Reverse	
2886	bin	R	0..1	-	Digital output: HP Bypass	
2887	bin	R	0..1	-	Digital output: HP Operating	
2888	bin	R	0..1	-	Digital output: HP Tray heating	
2889	bin	R	0..1	-	Digital output: Zone1 heating/operating/ stage 1	
2890	bin	R	0..1	-	Digital output: Zone1 cooling/stage 2	
2891	bin	R	0..1	-	Digital output: Zone1 heating/stage 3	
2892	bin	R	0..1	-	Digital output: Zone1 stage 4	
2893	bin	R	0..1	-	Digital output: Zone1 reversed (heating)	
2894	bin	R	0..1	-	Digital output: Zone2 heating/operating/ stage 1	
2895	bin	R	0..1	-	Digital output: Zone2 cooling/stage 2	
2896	bin	R	0..1	-	Digital output: Zone2 heating/stage 3	
2897	bin	R	0..1	-	Digital output: Zone2 stage 4	
2898	bin	R	0..1	-	Digital output: Zone2 reversed (heating)	

SERVICE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
900	bin	R/W		0	Modes reset to default	b4-Special, b3-Economy2, b2-Economy1, b1-Comfort2, b0-Comfort1
901	bin	R/W		0	Functions reset to default	b9-ZN2, b8-ZN1, b7-HUM, b6-REC, b5-ODD, b4-SNC, b3-OVR, b2-MTC, b1-OCV, b0-AQC
902	bin	R/W		0	Settings reset to default	b3-485_Config, b2-IP+Mask, b1-Flow_mode, b0-Temp_mode
18000	int	R/W	0	-	User password reset	Write 0x99C5 to reset

SERVICE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
18001	int	R/W	0	-	User settings reset	Write 0x99C5 to reset
18002	int	R/W	0	-	Clean air filters calibration	Write 0x99C5 to start calibration
18003	int	R/W	0	-	Counters reset	Write 0x??C5 to reset, ?? => b4-Heat exchanger, b3-Air cooler, b2-Exhaust fan, b1-Supply fan, b0-Air heater (1 - Reset). 0x01C5 => Reset air heater counter only, 0x07C5 => Reset both fans and air heater counters
18004	int	R	0..9999	-	Controller firmware version	
18005	int	R/W	0..1000	0	Service time counter	0..100.0%, Write 0x99C5 to reset

## UAB KOMFOVENT

### TECHNINĖS PRIEŽIŪROS SKYRIUS / SERVICE AND SUPPORT

Tel. +370 5 200 8000  
Mob. +370 652 03 180  
service@komfovent.com

### ООО «КОМФОВЕНТ»

Россия, Москва  
ул. Выборгская д. 16,  
стр. 1, 2 этаж, 206 офис  
Тел. +7 499 673 22 73  
info.oka@komfovent.com  
www.komfovent.ru

### ООО «КОМФОВЕНТ»

390017 г. Рязань  
Рязское шоссе, 20 литера Е, пом Н6  
Тел.: +7 491 255 95 71  
info.oka@komfovent.com  
www.komfovent.ru

### ИООО «Комфoвент»

Республика Беларусь, 220125 г. Минск,  
ул. Уручская 21 – 423  
Тел. +375 17 266 5297, 266 6327  
info.by@komfovent.com  
www.komfovent.by

### Komfovent AB

Ögärdesvägen 12B  
433 30 Partille, Sverige  
Tel. +46 31 487 752  
info\_se@komfovent.com  
www.komfovent.se

### Komfovent Oy

Muuntotie 1 C 1  
FI-01 510 VANTAA  
Tel. +358 0 408 263 500  
info\_fi@komfovent.com  
www.komfovent.com

### Komfovent GmbH

Konrad-Zuse-Str. 2a, 42551 Velbert,  
Deutschland  
Tel. +49 0 2051 6051180  
info@komfovent.de  
www.komfovent.de

### SIA Komfovent

Bukaišu iela 1,  
LV-1004 Rīga  
Tel. +371 24 664433  
info@komfovent.lv  
www.komfovent.lv

www.komfovent.com

## PARTNERS

AT	J. PICHLER Gesellschaft m. b. H.	www.pichlerluft.at
BE	Ventilair group	www.ventilairgroup.com
	ACB Airconditioning	www.acbairco.be
CZ	REKUVENT s.r.o.	www.rekuvent.cz
CH	WESCO AG	www.wesco.ch
	SUDCLIMATAIR SA	www.sudclimatair.ch
	CLIMAIR GmbH	www.climair.ch
DK	Øland A/S	www.oeland.dk
EE	BVT Partners	www.bvtpartners.ee
FR	AERIA	www.aeria-france.fr
HR	Microclima	www.microclima.hr
HU	AIRVENT Légtechnikai Zrt.	www.airvent.hu
	Gevent Magyarorszáig Kft.	www.gevent.hu
	Merkapt	www.merkapt.hu
IR	Fantech Ventilation Ltd	www.fantech.ie
IS	Blikk & Tækniþjónustan ehf	www.bogt.is
	Hitataekni ehf	www.hitataekni.is
IT	Icaria srl	www.icariavmc.it
NL	Ventilair group	www.ventilairgroup.com
	DECIPOL-Vortvent	www.vortvent.nl
NO	Ventistål AS	www.ventistal.no
	Thermo Control AS	www.thermocontrol.no
PL	Ventia Sp. z o.o.	www.ventia.pl
SE	Nordisk Ventilator AB	www.nordiskventilator.se
SI	Agregat d.o.o	www.agregat.si
SK	TZB produkt, s.r.o.	www.tzbprodukt.sk



Buitendijks 63, 3356 LX Papendrecht  
Tel: +31(0)85-782 64 00  
Email: info@vortvent.nl

M2-C5-20-01